



## **FLEXI-TILE INSTALLATION GUIDE**

### **INSTALLATION & MAINTENANCE NOTES**

- Flexi-Tile should not be installed in areas subject to excessive temperature variations
- For installations subject to normal temperature variations it is necessary to allow a 0.5% movement in the floor and an appropriate gap should be left between the tiles and any fixed point
- The area of installation should be maintained at a uniform temperature for 24 hours before, during and after installation is completed
- The Flexi-Tile product which is to be installed should be conditioned at the surrounding ambient temperature, for a minimum of 24 hours. If any distortion of the tiles has occurred during transport, please remove tiles from pallet and invert the bundles on a flat surface, so the the tile that was at the top is face down on the floor, to ensure all tiles are flat before installation commences.
- Proper maintenance on a regular basis is essential for the appearance and longevity of Flexi-Tile products

### **Flexi-Tiles can be loose laid in areas where the following operate:**

- Four wheeled forklift trucks with rubber tyres not carrying more than 1 tonne
- Three wheeled forklift trucks with rubber tyres not carrying more that 800kg
- Pallet trucks not carrying more than 800kg
- Electric pallet trucks not carrying more than 700kg

### **Adhesive must be used in areas where:**

- Forklift, Pallet or Electrical pallet trucks exceed acceptable weights for loose laying
- Forklift trucks with steel or nylon wheels are in use
- Three wheel forklifts with single rear wheel
- A reach truck is in use
- Exposed to significant temperature variation especially when extremely hot
- Exposed to direct sunlight